


SMM-117 Assembly Instruction

1. Use your DVD original supplied AV cable to re-configure your DVD player. Connect its video & audio output to the DVD karaoke mixer's video & auxiliary input at the back.
2. Use supplied AV cable to connect the DVD karaoke mixer's video & auxiliary output located at the back to your TV's video & audio input.
3. Plug the supplied wire microphone into the DVD karaoke mixer's mic jack.
4. Insert the supplied AC/DC adapter's DC plug into the DVD karaoke mixer's DC jack and plug AC/DC adapter into an electrical wall outlet.
5. Switch on your DVD player.
6. Switch on your TV and microphone.
7. Switch on the DVD karaoke mixer by turning on mic volume.
8. Adjust echo and mic volume as you need.

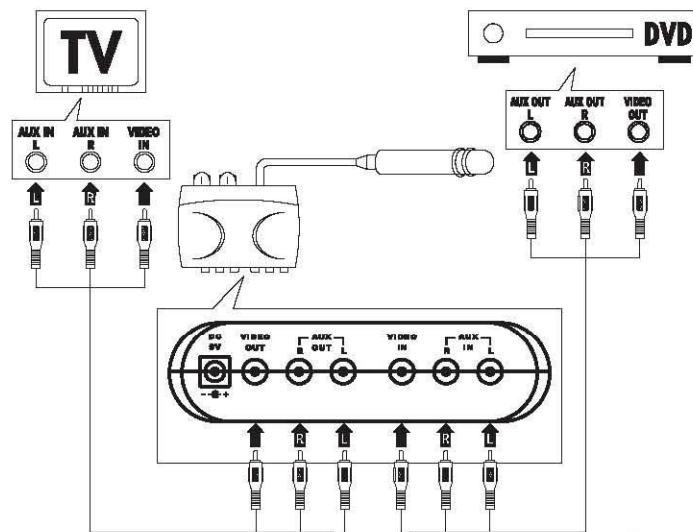

117-0611-ENG01